

FOGBANDIT

320: HOW TO ISOLATE FOG EJECTION AND HOW TO RECORD ERROR LEDS




Remove the cover of the CF31 Controller Power Supply enclosure – please see an example to the left.

Inside you will see 1 x CF31 Controller **for each** Fog Generator installed.

The CF31 is shown below. Please see the error LED status (fault description directly below), please video record this if there is a fault and then send the video to: **0333 1889966 on WhatsApp.**

! Always Fog isolate the Fog System before doing ANY work on it or a connected Alarm System.

Number of flashes 🔄	Indicated failure of error LED	Action
2 x	The MCU reads unreal values.	Back to factory
3 x	Heat exchanger temperature error.	Back to factory

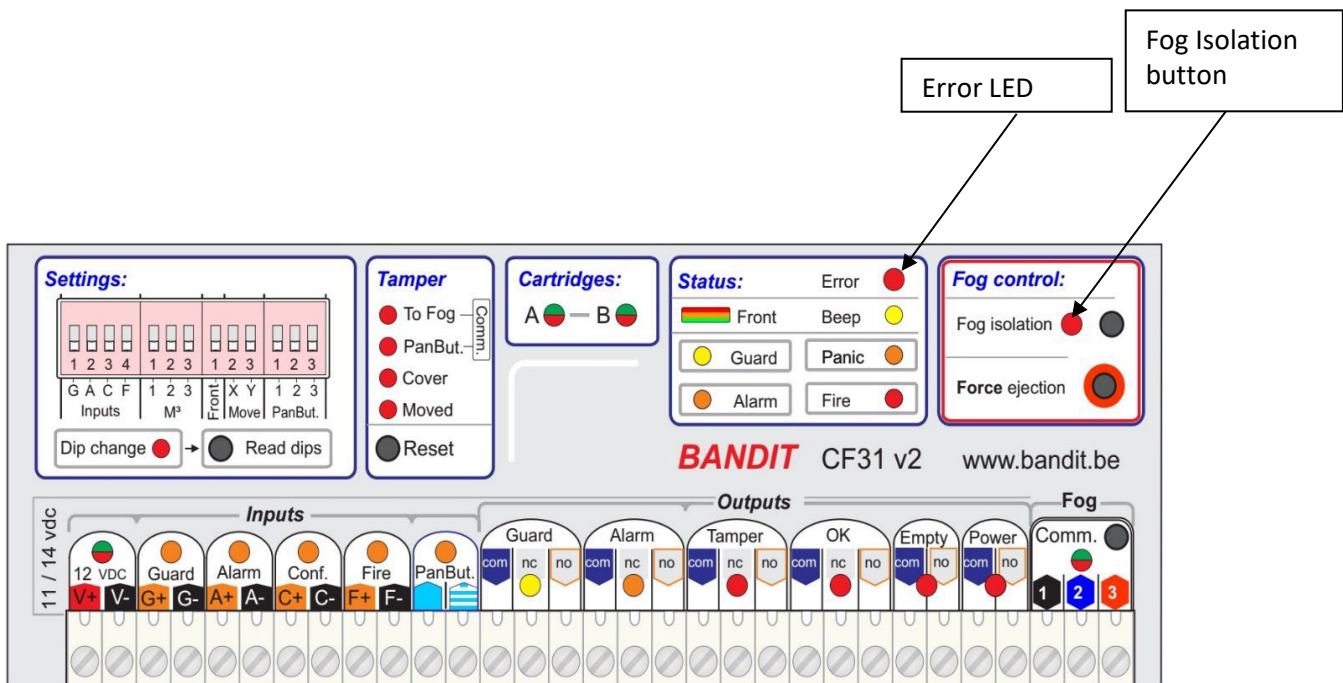

Press the grey 'Fog isolation' button on each CF31 Controller to set the fog isolation on. The **GREEN** light will extinguish and the front light on the associated Fog Generator will turn to **RED** to indicate it is now fog isolated.

Once testing is concluded, press the grey 'Fog isolation' button on each CF31 Controller again to remove the isolation. The **RED** light will extinguish and the front light on the associated Fog Generator will turn to **GREEN** to indicate it is now fully operational again.